

### **23.A/C Filter**

#### **A: REPLACEMENT**

For the A/C filter replacement procedures, refer to the AC section. <Ref. to AC-54, REPLACEMENT, A/C Filter.>

## ENGINE SECTION

This service manual has been prepared to provide SUBARU service personnel with the necessary information and data for the correct maintenance and repair of SUBARU vehicles.

This manual includes the procedures for maintenance, disassembling, reassembling, inspection and adjustment of components and diagnostics for guidance of experienced mechanics.

Please peruse and utilize this manual fully to ensure complete repair work for satisfying our customers by keeping their vehicle in optimum condition. When replacement of parts during repair work is needed, be sure to use SUBARU genuine parts.

All information, illustration and specifications contained in this manual are based on the latest product information available at the time of publication approval.

FUEL INJECTION (FUEL SYSTEMS)

FU(H6DO)

EMISSION CONTROL  
(AUX. EMISSION CONTROL DEVICES)

EC(H6DO)

INTAKE (INDUCTION)

IN(H6DO)

MECHANICAL

ME(H6DO)

EXHAUST

EX(H6DO)

COOLING

CO(H6DO)

LUBRICATION

LU(H6DO)

SPEED CONTROL SYSTEMS

SP(H6DO)

IGNITION

IG(H6DO)

STARTING/CHARGING SYSTEMS

SC(H6DO)

ENGINE (DIAGNOSTICS)

EN(H6DO)(diag)

GENERAL DESCRIPTION

GD(H6DO)



# FUEL INJECTION (FUEL SYSTEMS)

## *FU(H6DO)*

---

	Page
1. General Description .....	2
2. Throttle Body .....	14
3. Intake Manifold .....	15
4. Engine Coolant Temperature Sensor .....	21
5. Crankshaft Position Sensor .....	22
6. Camshaft Position Sensor .....	23
7. Knock Sensor .....	24
8. Throttle Position Sensor .....	25
9. Manifold Absolute Pressure Sensor .....	26
10. Mass Air Flow and Intake Air Temperature Sensor .....	27
11. EGR Valve .....	28
12. Fuel Injector .....	29
13. Oil Flow Control Solenoid Valve .....	31
14. Oil Temperature Sensor .....	32
15. Front Oxygen (A/F) Sensor .....	33
16. Rear Oxygen Sensor .....	35
17. Engine Control Module (ECM) .....	37
18. Main Relay .....	38
19. Fuel Pump Relay .....	39
20. Electronic Throttle Control Relay .....	40
21. Fuel Pump Control Unit .....	41
22. Fuel .....	42
23. Fuel Tank .....	44
24. Fuel Filler Pipe .....	47
25. Fuel Pump .....	49
26. Fuel Level Sensor .....	51
27. Fuel Sub Level Sensor .....	52
28. Fuel Filter .....	53
29. Fuel Delivery & Evaporation Lines .....	54
30. Fuel System Trouble in General .....	57